


THIS DRAWING IS PROPRIETARY AND CONFIDENTIAL TO ATRIUM WINDOWS & DOORS AND SHALL NOT BE REPRODUCED, COPIED OR DISSEMINATED WITHOUT THE EXPRESSED WRITTEN PERMISSION OF ATRIUM WINDOWS & DOORS.

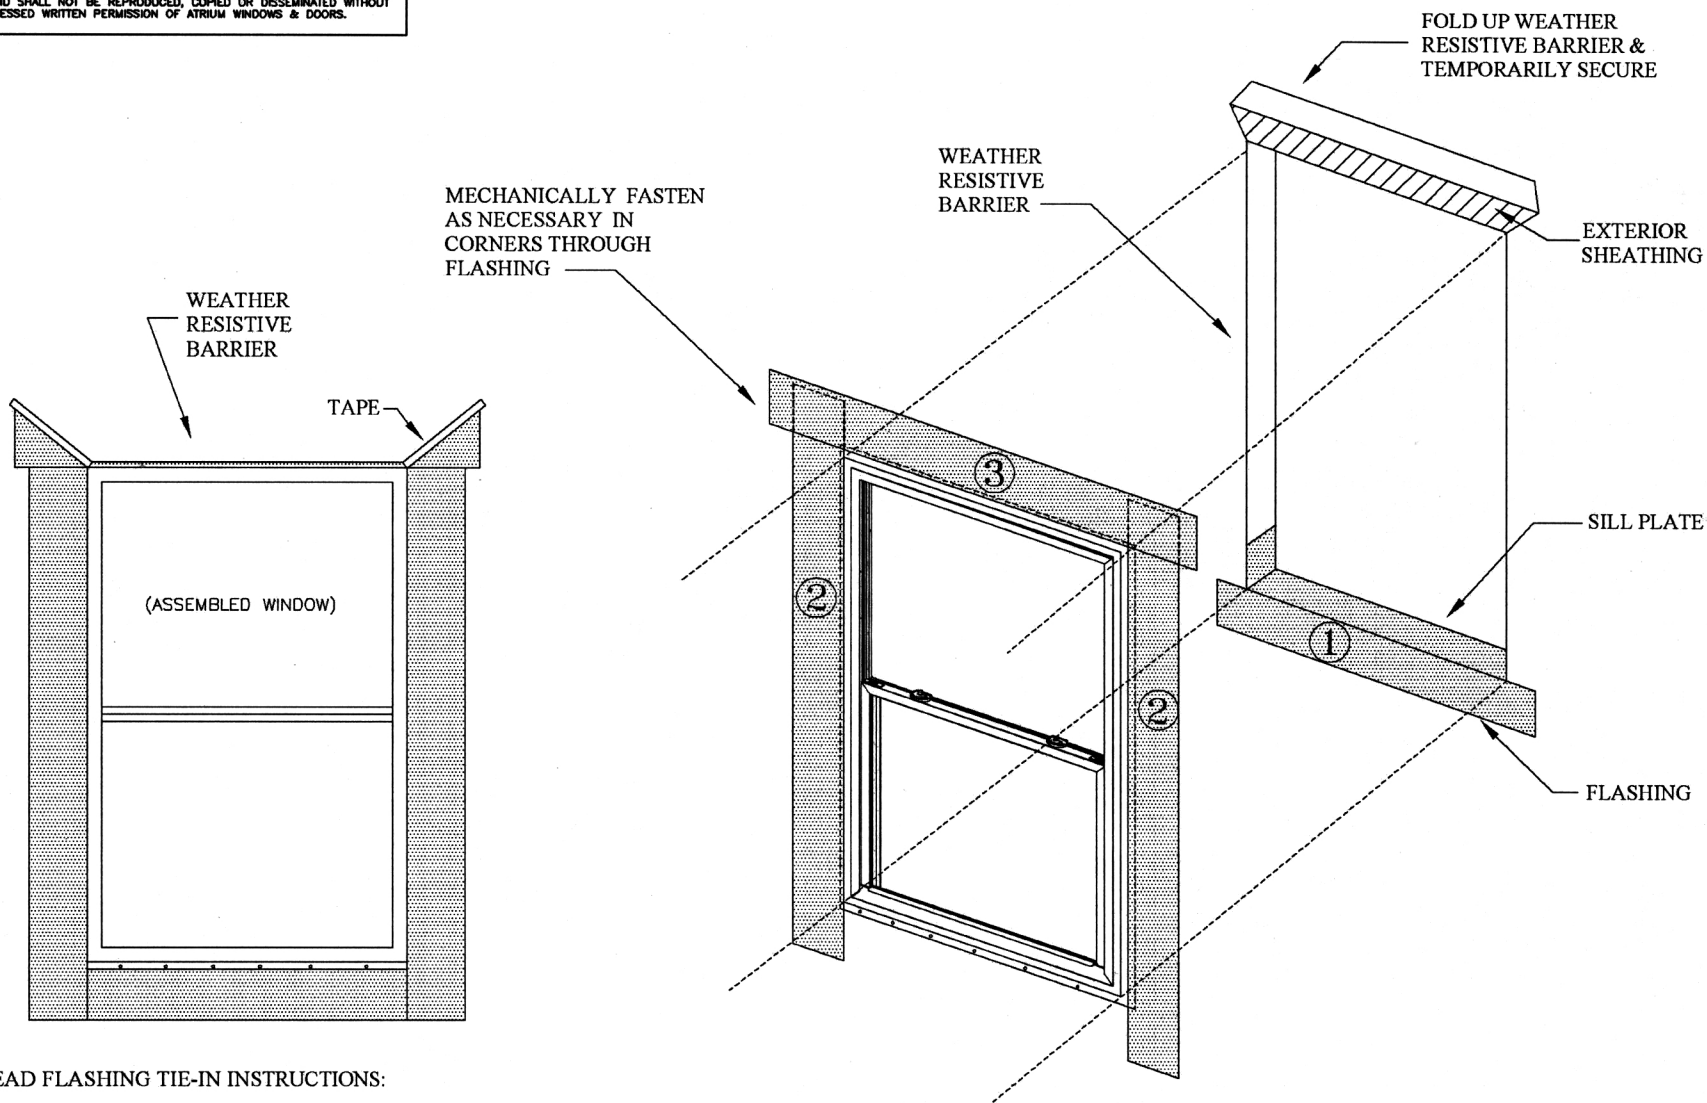

HEAD FLASHING TIE-IN INSTRUCTIONS:

1. CUT, FOLD UP & TEMPORARILY SECURE WEATHER RESISTIVE BARRIER ABOVE HEADER TO ALLOW FOR FLASHING INSTALLATION
2. INSTALL HEAD FLASHING UNDER WEATHER RESISTIVE BARRIER
3. FOLD WEATHER RESISTIVE BARRIER BACK OVER HEAD FLASHING AND SEAL WITH TAPE

- *INSTALL FLASHING IN ORDER AS SHOWN BY NUMBERS
- *INSTALL FLASHING & WEATHER RESISTIVE BARRIER TO FORM WATER SHEDDING LAPS



FLASHING INSTALLATION AFTER WEATHER RESISTIVE BARRIER

DRAWING: 101006B

SCALE: NTS