
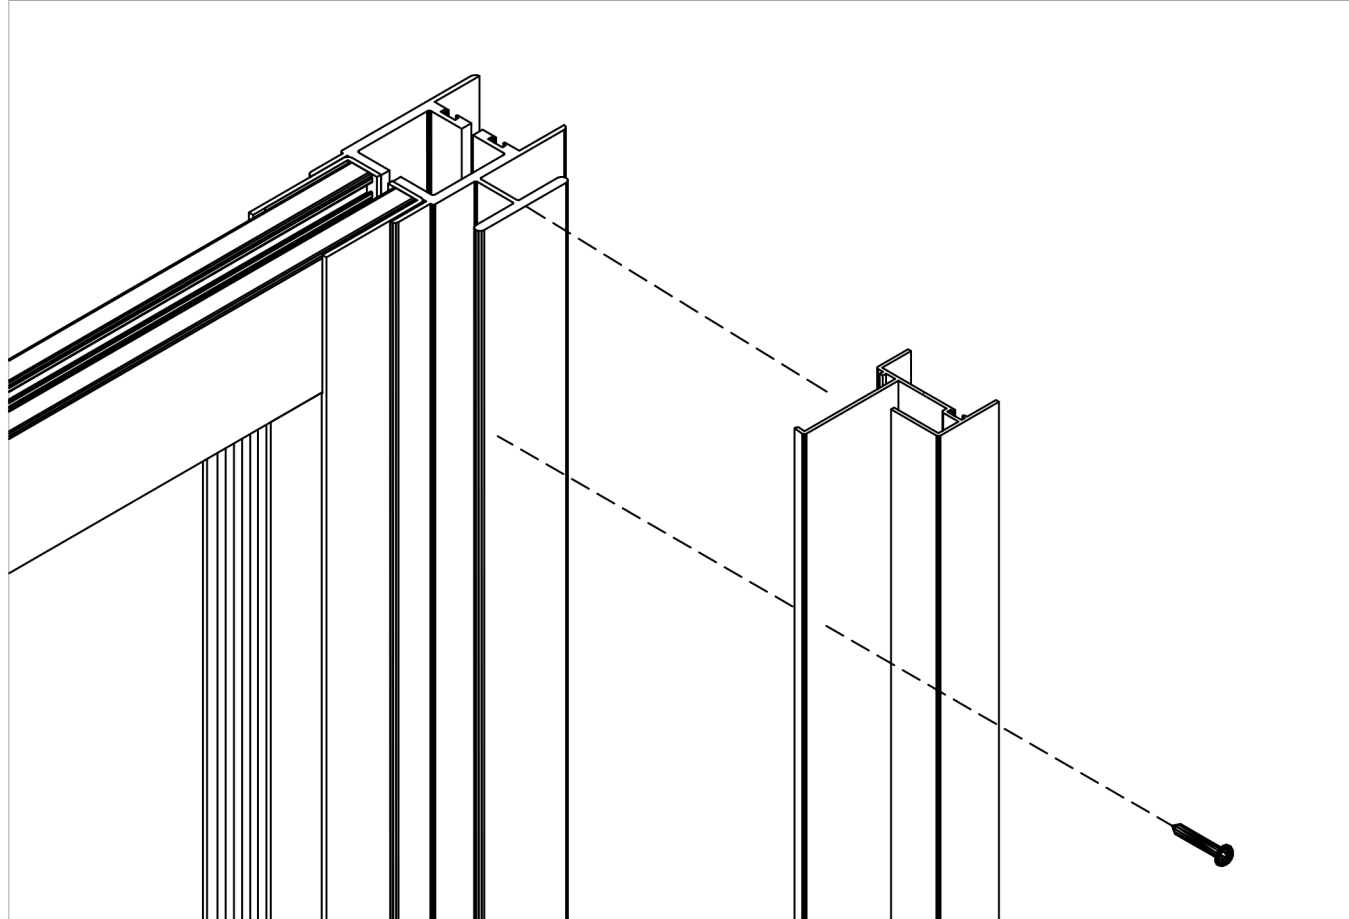



**SERIES 83  
OXO  
SCREEN DOOR  
INSTALLATION**

REV 3/2026



Attach OXO screen jamb (  ) to XX adaptor (  ) by snapping it on. Secure screen jamb with three #7 x 7/16" self drilling screws, one at each end and one the same height as the door latches.